

GUCCI

INSTRUCTIONS FOR USE
I-GUCCI WATCHES

Instructions for use

General information

Main functions:

Double time zone, see "List of cities" table

- world time with selected city indicator
- local time

Display options:

- digital, by numerals with date
- digital, by hands on ref. 114-2 only
- digital, by numerals with seconds

DST (Daylight Saving Time)

Date and day of week programmed until 31 December 2049, also takes into account the different month lengths and leap years.

12 or 24 hour display format

Alarm for local time

Backlighting

GUCCI

World time display area:
Hour, minutes, city code



Push-button **A**: Select display options
Set the various time
and date functions

Push-button **B**: Backlighting
Set alarm
Validate settings made

Local time display area:
Hour, minutes, day of week, date or seconds

Daylight saving time (DST)


When daylight saving time is activated (DST ON), winter time automatically advances one hour to summer time. You need to bear in mind that summer time is not used in certain states or regions.

Backlighting

A short press on push-button **B** will turn the backlight on for 3 seconds. If setting start with backlighting on, the backlight will keep on during the whole setting process.

1. a) Time display options (ref. 114-2)


Press push-button **A** to change the display option.

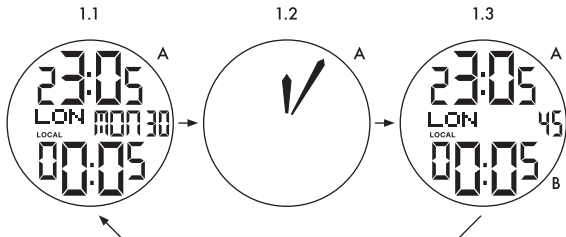

Regardless of the display option selected, press push-button **B** to activate backlighting.

b) Time display options (ref. 114-4)

Press push-button **A** to change the display option.

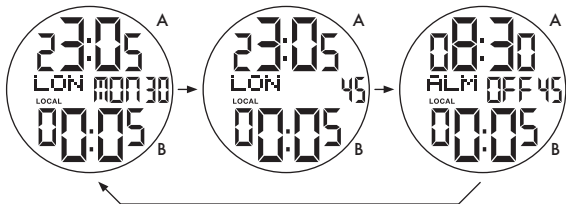

Regardless of the display option selected, press push-button **B** to activate backlighting.


Description of display options in "Time display" mode

1.1 Double time zone display, with date indicator



- 1 World time: hour
- 2 World time: minutes
- 3 Date
- 4 Day of week
- 5 Local time: minutes
- 6 Local time: hour
- 7 DST indicator for local time
- 8 Local time alarm activated indicator
- 9 12/24 hour indicator for local time
- 10 Indicator for local time
- 11 City code for world time
- 12 DST indicator for world time
- 13 12/24 hour indicator for world time


1.2 Local time display by hands (ref. 114-2 only)

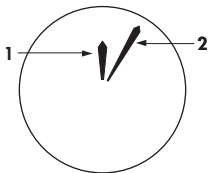

1 Hour hand

2 Minutes hand

 1.3 Double time zone display, with second indicator

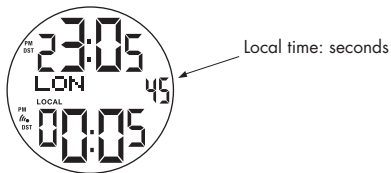

2. Time and date setting

- The setting sequences for time and date setting and for alarm setting can be accessed regardless of the display option selected.
- If no push-button is pressed for over thirty seconds, the original display option will be restored automatically.
- If setting start with backlighting on, the backlight will keep on during the whole setting process.

2.1 World time



Press push-button **A**, and hold for at least two seconds.
The city code for world time will flash.

Scroll through the city codes by pressing push-button **A**.
For further information on city codes, see the "List of cities" table.


Activate (ON) or deactivate (OFF) daylight saving time for the selected city by pressing push-button **A**. The DST icon appears if the function is activated. (*)

Press push-button **B** to go to the next step.
The DST indicator will flash.

Press push-button **B** to go to the next step. The display will switch to local time and date setting mode, and the city code for local time will flash.

(*) If you do not need to modify local time, it is possible to exit the setting sequence at this point by holding down push-button **B** for at least two seconds.

2.2 Local time

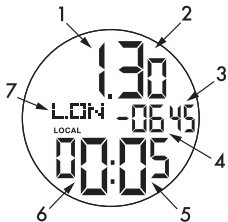

- 1 Month
- 2 Day
- 3 Local time: seconds
- 4 Year
- 5 Local time: minutes
- 6 Local time: hour
- 7 City code for local time

GUCCI



Scroll through the city codes by pressing push-button **A**.
For further information on city codes, see the "List of cities" table.

When selecting the city, local time will be corrected automatically based on world time. The date will also be adapted according to the time zone where the city is located.

Press push-button **B** to go to the next step. The DST indicator will flash.

Activate (ON) or deactivate (OFF) daylight saving time for the local city selected by pressing push-button **A**. The DST icon appears if the function is activated.

Press push-button **B** to go to the next step. The hour will flash.

GUCCI



Set the hour by pressing push-button **A**.

Press push-button **B** to go to the next step. The minutes will flash.

Set the minutes by pressing push-button **A**.

Press push-button **B** to go to the next step. The seconds will flash.

Reset the seconds by pressing push-button **A**.

Press push-button **B** to go to the next step. The year will flash.

If a correction is made to local time in this setting phase, the world time will be recalculated and adjusted automatically.

2.3 Date



Set the year by pressing push-button **A**.

Press push-button **B** to go to the next step.
The month will flash.

Set the month by pressing push-button **A**.

Press push-button **B** to go to the next step.
The day will flash.

Set the day by pressing push-button **A**.

Press push-button **B** to go to the next step.
The display will switch to 12/24 hour format setting mode, and the 12/24 hour indicator will flash.

2.4 12/24 hour format



Select the 12/24 hour format by pressing push-button **A**.

Press push-button **B** to return to the original display option. The icon **PM** will appear if the 12 hour format is selected.


3. Alarm setting

3.1 Alarm for local time




- 1 Alarm time: hour
- 2 Alarm time: minutes
- 3 Alarm ON (Active) / OFF (Inactive) indicator
- 4 Local time: minutes
- 5 Local time: hour
- 6 Local time alarm activated indicator
- 7 Alarm setting mode indicator

GUCCI

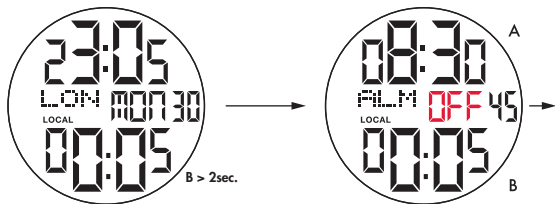

Press push-button **B**, and hold for at least two seconds.
The alarm ON (Active) / OFF (Inactive) indicator will flash.

Activate (ON) or deactivate (OFF) the alarm for local time by pressing push-button **A**.
The icon  will appear if the alarm is activated.

Press push-button **B** to go to the next step.
The hour will flash.

GUCCI



Set the hour by pressing push-button **A**.

Press push-button **B** to go to the next step. The minutes will flash.

Set the minutes by pressing push-button **A**.

Press push-button **B** to return to the original display option.

The alarm sounds for 30 secs. It can be stopped by pressing one of the push-buttons.

GUCCI

City code	City	Time difference	Other cities in the same time zone
MDY	MIDWAY ISLANDS	-11	
HNL	HONOLULU, HI	-10	PAPEETE
ANC	ANCHORAGE	-9	NOME
LAX	BEVERLY HILLS, CA	-8	VANCOUVER, LAS VEGAS, TIJUANA
ASE	ASPEN, CO	-7	EDMONTON, DENVER, PHOENIX
CHI + MEX	CHICAGO, IL + MEXICO CITY	-6	HOUSTON, EL SALVADOR
NYC	NEW YORK, NY	-5	MONTREAL, DETROIT, BOSTON, MIAMI, BOGOTA, LIMA
CCS	CARACAS	-4.5	
SCL	SANTIAGO	-4	LA PAZ, SANTO DOMINGO
SAO	SAO PAULO	-3	RIO DE JANEIRO, BUENOS AIRES, MONTEVIDEO
SAW	GRYTVIKEN	-2	
AZR	AZORES	-1	PRAIA
LON	LONDON	0	LISBON, CASABLANCA, BAMAKO, DAKAR
ROM	ROME	1	ZÜRICH, BRUSSELS, VIENNA, BERLIN, PARIS, STOCKHOLM, MILAN, MADRID
ATH	ATHENS	2	HELSINKI, CAIRO, TEL AVIV, JOHANNESBURG, BEIRUT
JED	JEDDAH	3	ST. PETERSBURG, RIYADH, NAIROBI, ADDIS ABABA, KUWEIT
MSK	MOSCOW	4	ABU DHABI, MUSCAT
KHI	KARACHI	5	MALE, TASHKENT
DEL	NEW DELHI	5.5	MUMBAI, COLOMBO
DAC	DHAKA	6	
BKK	BANGKOK	7	PHNOM PENH, JAKARTA, HANOI
HKG	HONG KONG	8	BEIJING, SHANGHAI, SINGAPORE, MANILA, TAIPEI, KUALA LUMPUR, PERTH
TYO + SEL	TOKYO + SEOUL	9	PYONGYANG
SYD	SYDNEY	10	VLADIVOSTOK, MELBOURNE
NOU	NOUMEA	11	PORT VILA
AKL	AUCKLAND	12	WELLINGTON, NAURU ISLAND

Note: Global GMT times may be subject to change. You can check the GMT time of the 2nd time zone at www.greenwichmeantime.com (for example).

GUCCI

	Country	City	City code	GMT
NORTH AMERICA	MIDWAY ISLANDS	MIDWAY ISLANDS	MDY	-11
	UNITED STATES	HONOLULU, HI	HNL	-10
	UNITED STATES	ANCHORAGE	ANC	-9
	UNITED STATES	BEVERLY HILLS, CA	LAX	-8
	UNITED STATES	ASPEN, CO	ASE	-7
	UNITED STATES	CHICAGO, IL	CHI	-6
	MEXICO	MEXICO CITY	MEX	-6
SOUTH AMERICA	UNITED STATES	NEW YORK, NY	NYC	-5
	VENEZUELA	CARACAS	CCS	-4.5
	CHILE	SANTIAGO	SCL	-4
	BRAZIL	SAO PAULO	SAO	-3
	SANDWICH ISLANDS	GRYTVIKEN	SAW	-2
EUROPE	PORTUGAL	AZORES	AZR	-1
	UNITED KINGDOM	LONDON	LON	0
	ITALY	ROME	ROM	1
	GREECE	ATHENS	ATH	2
	RUSSIA	MOSCOW	MSK	4
MIDDLE EAST ASIA	UAE	JEDDAH	JED	3
	PAKISTAN	KARACHI	KHI	5
	INDIA	NEW DELHI	DEL	5.5
	BANGLADESH	DHAKA	DAC	6
	THAILAND	BANGKOK	BKK	7
	CHINA	HONG KONG	HKG	8
	JAPAN	TOKYO	TYO	9
	SOUTH KOREA	SEOUL	SEL	9
OCEANIA	AUSTRALIA	SYDNEY	SYD	10
	NEW CALEDONIA	NOUMEA	NOU	11
	NEW ZEALAND	AUCKLAND	AKL	12

Please note that the time zones are based on world time GMT at the time of production. However, some countries may decide to change their time zone at any time. As a result, previous versions of the I-Gucci may vary slightly.

Note: Global GMT times may be subject to change. You can check the GMT time of the 2nd time zone at www.greenwichmeantime.com (for example).