


# MIDO®

SWISS WATCHES SINCE 1918

## GMT watch User's Manual

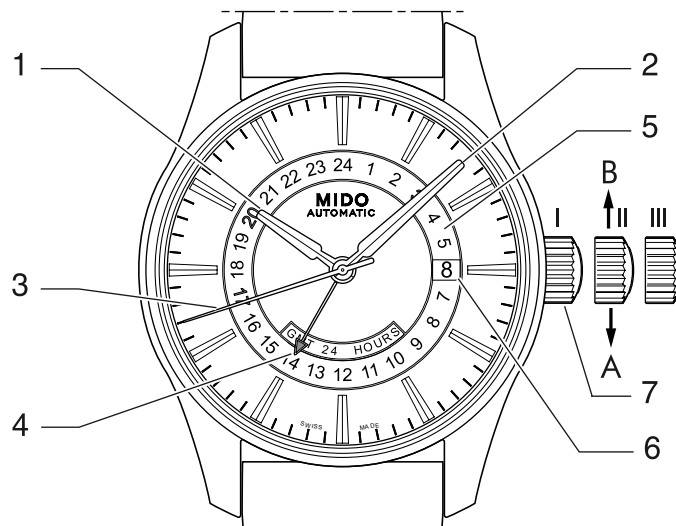

### Display and functions

- 1 Hour hand
- 2 Minute hand
- 3 Second hand
- 4 24 hour hand
- 5 24 hour scale
- 6 Date indicator
- 7 Crown for winding, setting the time, adjusting the date and setting the 24 hour hand

#### 3-position crown (7):

- IB** Winding position (unscrewed, not pulled out)
- II** Position for setting the date (**A** turn backwards) / the 24 hour hand (**B** turn forwards) (unscrewed, half pulled out)
- III** Setting position for time (unscrewed, completely pulled out)

#### Screw-down crown:

- 
- IA** Initial position (screwed down, not pulled out)
  - IB** Winding position (unscrewed, not pulled out)

## Congratulations

We would like to congratulate you on having chosen an automatic timepiece made by MIDO®, a Swiss brand among the most highly renowned in the world.

With its 24 hour hand (4) which indicates a second time zone, this automatic GMT model is a veritable globetrotters' watch.

Meticulously assembled using high quality materials and components, your watch is protected against impacts, variations in temperature, water and dust. To ensure perfect and accurate operation for many years, we advise you to closely follow the advice given in these instructions.

### Technical specifications

**MIDO® 1193** (calibre (based on ETA 2893-2), Ø 11 1/2" (25.60 mm), thickness: 4.10 mm, 21 jewels, 28,800 vib/h, power reserve approx. 42 hours, INCABLOC and NIVACOURBE shock absorber systems, GLUCYDUR balance, NIVAROX I balance spring, NIVAFLEX NO barrel spring, blued screws, oscillating weight with côtes de Genève and engraved solid black MIDO® logo.

## Usage / Settings

### Screw-down crown

Your watch is equipped with a screw-down crown at the 3 o'clock position. Before changing a setting, this needs to be unscrewed.

**Important: After any operation, in order to keep the watch's water resistance, be sure to screw the crown back down, first pressing it in and then turning it forwards to the end.**

### Winding

Crown (7) in position **IB**, unscrewed, not pulled

Your watch has a power reserve of approximately 42 hours. Manual winding is required if you have not worn your watch for this length of time. To reactivate it, you need only turn the crown a few revolutions (forward) or swing your watch from side to side a few times. Around 32 revolutions of the crown (forward) are required to obtain the maximum power reserve.

When wearing your watch, the automatic device winds it every time you move your wrist.

Note: On this automatic model, there is no stop to indicate it is fully wound.

### Setting the time

Unscrew and pull out the crown (7) to position **III** with care; the seconds hand (3) will stop. Turn the crown forwards or backwards to set the desired time. Once the hour hand passes the 12 o'clock position, you will be able to see whether it is indicating midnight (the date will change) or midday (the date will not change).

### Advice on how to synchronise your watch

To synchronise the second hand (3) with an official time signal (radio/TV/Internet), pull out the crown to position **III**; the second hand will stop. When you hear the audible signal, push the crown back into position **I** and tighten it back down.

### Second time zone and universal time

The 24 hour hand (4) shows the time in a second time zone on the scale (5) on the dial. It makes one revolution in 24 hours.

Pull out the crown (7) to position **II** and turn it forwards (**B**) until the local time in the second time zone is shown. Then, push the crown back into position **I** and tighten it back down.

During this operation, your watch will continue to function normally, so you will not need to alter the time.

### Quick date correction

**Important: Never set the date between 10 pm and 2 am (the movement is in the process of changing the date).**

Pull out the crown (7) to position **II** and turn it backwards (**A**) until the desired date (6) is displayed. Then, push the crown back into position **I** and tighten it back down.

During this operation, your watch will continue to function normally, so you will not need to alter the time.

## Care and maintenance

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be subjected to major variations in temperature or humidity, direct sunlight or strong magnetic fields.

To ensure that you receive the best possible service and the warranty remains valid, always consult an approved MIDO® dealer or agent.

The precision finish mechanism in your MIDO® watch will give you complete satisfaction for many years if properly cared for. However, we recommend that you have your watch checked every 3 to 4 years by your approved MIDO® reseller or agent.